

## ASSEMBLY INSTRUCTIONS Double Deep 38 1/4" Modular Racking

Question?
Call Us 1-845-658-7181 or Visit Us at wineracks.com

Thank you and CONGRATULATIONS for purchasing this fine quality product. Properly assembled and installed, your racking will enhance you wine collection for many years to come. To assemble your racks, please check to ensure all necessary parts have been included and follow the assembly instructions closely. if you have any questions or problems, please call us at 1-845-658-7181, Monday through Friday 9am to 5pm EST





If you are planning to stain or finish your racking we recommend you do so BEFORE assembly for best results.



\*Note: Instructions shown for a 6 column rack. Assembly procedure remains the same for allstandard racking.

## PARTS LIST END LADDER MIDDLE LADDER ASSEMBLIES ASSEMBLIES All individual bottle racks are designed to be assembled with a nail gun, using either 18 gauge 1 1/2" brad nails or similar finishing nail. Nails are not included. 38<u>1</u>" 38<u>1</u>" If you purchased pre-drilled screw assembly. 1 1/2" Phillips head screws will be supplied in your order. SPACER BAR SPACER BAR SCREW ASSEMBLY ASSEMBLY (Various Lengths) (Various Lengths)

## PACKAGE CONTENTS SKU PRODUCT NAME **MIDDLE END** SPACER SCREWS LADDERS LADDERS BARS (if used) 8 3-000-0525-3825-DD 4 1 Column 38 1/4" Mod. Double Deep Individual Racking 2 8 0 2 8 3-000-0975-3825-DD 2 Column 38 1/4" Mod. Double Deep Individual Racking 1 4 12 2 2 8 3-000-1425-3825-DD 3 Column 38 1/4" Mod. Double Deep Individual Racking 4 16 2 8 3-000-1875-3825-DD 4 Column 38 1/4" Mod. Double Deep Individual Racking 3 4 20 8 3-000-2325-3825-DD 4 2 5 Column 38 1/4" Mod. Double Deep Individual Racking 4 24 8 3-000-2775-3825-DD 6 Column 38 1/4" Mod. Double Deep Individual Racking 5 2 4 28 6 2 8 3-000-3225-3825-DD 4 32 7 Column 38 1/4" Mod. Double Deep Individual Racking 7 2 8 3-000-3675-3825-DD 8 Column 38 1/4" Mod. Double Deep Individual Racking 4 36 2 8 3-000-4125-3825-DD 8 9 Column 38 1/4" Mod. Double Deep Individual Racking 4 40 2 8 3-000-4575-3825-DD 10 Column 38 1/4" Mod. Double Deep Individual Racking 4 44 8 3-000-5025-3825-DD 10 2 11 Column 38 1/4" Mod. Double Deep Individual Racking 4 48 8 3-000-5475-3825-DD 11 2 4 52 12 Column 38 1/4" Mod. Double Deep Individual Racking 2 8 3-000-5925-3825-DD 13 Column 38 1/4" Mod. Double Deep Individual Racking 12 56 4 2 8 3-000-6375-3825-DD 14 Column 38 1/4" Mod. Double Deep Individual Racking 13 4 60

\*Note: Please verify that you have the correct number of parts before proceeding.

8 3-000-6825-3825-DD

8 3-000-7275-3825-DD

8 3-000-7725-3825-DD

## PLEASE FOLLOW WRITTEN INSTRUCTIONS CAREFULLY

1. Find an open, flat area in which to assemble your racking. Carefully remove all components from the box and check all parts to verify package contents.


\*Tip: Begin with back of rack

2. Arrange the end ladders on the floor so that the bottle support pieces face one another. Attach spacer bar to top, and bottom.

15 Column 38 1/4" Mod. Double Deep Individual Racking

16 Column 38 1/4" Mod. Double Deep Individual Racking

17 Column 38 1/4" Mod. Double Deep Individual Racking

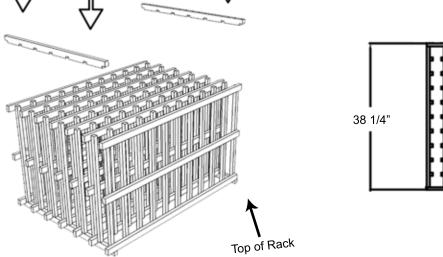

- 3. Attach middle ladders if applicable.
- 4. Flip and repeat for reverse side.



2

2

2

4

4

64

68

72

Top Spacer Bar

14

\*Note: For more stability attach racks to wall.