
WineRacks.com Phone 888.687.2517 Fax 845.658.5309

## 8\_5-250-6825-3975 15 COLUMN COMPOUND DIAMOND BIN ASSEMBLY INSTRUCTIONS






## **PARTS LIST**

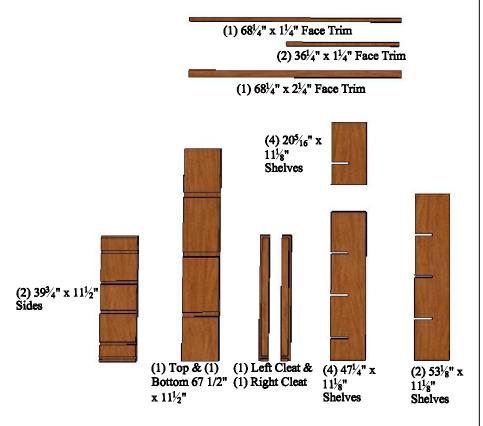


STEP 1.
ATTACH (2) SIDES TO THE (1)TOP &
(1)BOTTOM w/ SCREWS. ENSURE SLOTS
ON SIDES ALIGN.

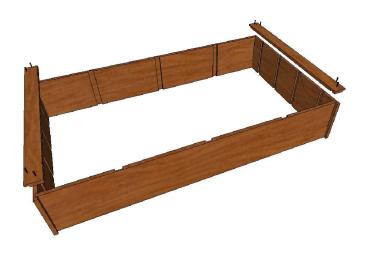


STEP 2. ATTACH (1) LEFT & (1) RIGHT CLEAT w/ SCREWS

WineRacks.com Phone 888.687.2517 Fax 845.658.5309

## 8\_5-250-6825-3975 15 COLUMN COMPOUND DIAMOND BIN ASSEMBLY INSTRUCTIONS

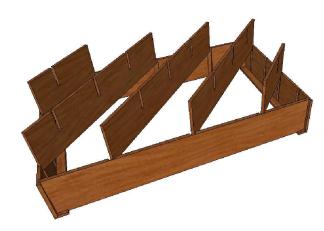

STEP 3.
FLIP BIN OVER. SLIDE (2) SHORT
SHELVES, (2) MEDIUM LENGTH SHELVES
& (1) LONG SLELF INTO SLOTS AS SHOWN.
ENSURE SHELF NOTCHES FACE UP AND
ALIGN.

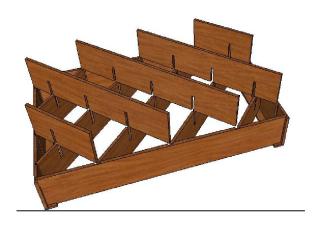

STEP 4.
SLIDE (2) SHORT SHELVES, (2) MEDIUM
LENGTH SHELVES & (1) LONG SLELF INTO
SLOTS AS SHOWN. ENSURE SHELF
NOTCHES FACE DOWN AND ALIGN.



STEP 5. ATTACH (1)  $2\frac{1}{4}$ " x  $68\frac{1}{4}$ " FACE TRIM TO BOTTOM OF BIN, (1)  $1\frac{1}{4}$ " X  $68\frac{1}{4}$ " FACE TRIM TO TOP & (1ea.)  $1\frac{1}{4}$ " X  $34\frac{1}{4}$ " FACE TRIM TO EACH SUDE OF BIN w/ FINISH NAILS.